6. Maintenance Call

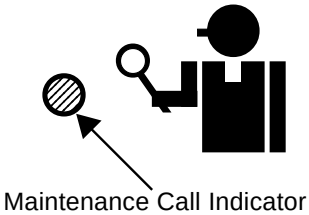

Maintenance Call Indicator:

The Maintenance call indicator (Green light) is turned on when copy (or master) count for the Maintenance call is reached to certain count, which is Maintenance call count setting. Maintenance call count setting can be set in Test mode (memory switch) No. 300 and 301.

Note: The machine can run normally even though the Maintenance call indicator (Green light) is turned on.

Setting the count for Maintenace Call:

Test mode No. 300: Setting the Copy count for Maintenance Call count
Test mode No. 301: Setting the Master count for Maintenance Call count

Note: Setting range: 100 - 999,900 copies (or masters)
Input "1" on display = "100" copies (or masters).
Input "0" on display = Never turning on the Indicator light.

Clearing of the memorized count for Maintenance Call count:

Test mode No. 94: Memorized copy and master count for Maintenance call will be cleared. (The memorized count for Maintenance call will not be cleared by using Test mode No. 93 <Memory count clear>, No. 97 <User mode clear> and No. 98 <Memory SW clear>.)